



NASA TECH BRIEF

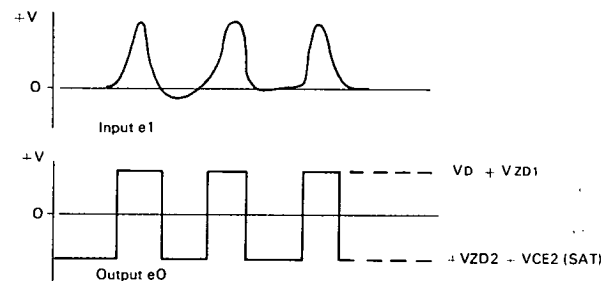

NASA Tech Briefs are issued to summarize specific innovations derived from the U.S. space program, to encourage their commercial application. Copies are available to the public at 15 cents each from the Clearinghouse for Federal Scientific and Technical Information, Springfield, Virginia 22151.

Positive and Negative Output Circuits

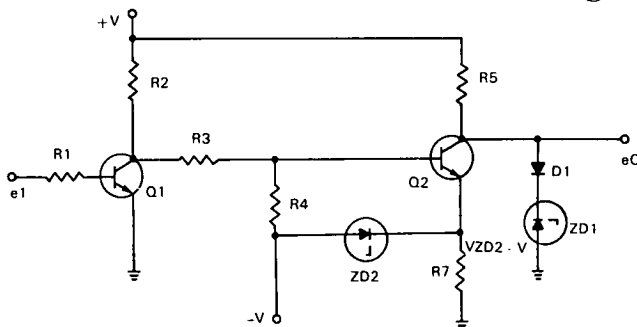

A trigger circuit which has a fixed positive output in the "on" state and a fixed negative output in the "off" state has been designed and tested. The amplitude of the positive and negative pulses may be independently chosen.

The output of a conventional transistor trigger in its "on" state is generally at a value of voltage near the power supply voltage. The output of this same trigger in its "off" state is at a voltage determined by the collector-to-emitter saturated voltage of the output transistor and the circuit trip point. However, in some applications, it is desirable to have the trigger undergo a change in polarity at its output. An example of this is a diode current gate which requires a small positive signal to make it conducting and a small negative signal to make it non-conducting. This requirement arose in the course of designing equipment to measure certain electrical characteristics of silicon controlled rectifiers as part of a radiation effects test program.

The circuit used is shown in the figure. In the "off" state, the input voltage, e_i , is too low to operate the trigger. Q_1 is off or non-conducting and Q_2 is saturated. The output voltage in this case is:

$$e_o = V_{D1} + V_{ZD1}$$

In the "on" state, $e_i > V_{BE(1)}$, Q_1 goes into saturation

and Q_2 becomes non-conducting. The output voltage is:

$$e_o = V_{ZD2} + V_{CE2(sat)} \approx -V$$

It is necessary that the bias resistors R_2 , R_3 , and R_4 be properly selected. The voltage at the base of transistor Q_2 must forward bias the base to emitter junction of this transistor when Q_1 is non-conducting. The voltage at the base of Q_2 must change to reverse bias this same junction when Q_1 goes into saturation. The procedures for selecting these resistors are those used for designing ordinary bistable multivibrator circuits.

Notes:

1. No further documentation is available.
2. Technical questions may be directed to:

Technology Utilization Officer
Lewis Research Center
21000 Brookpark Road
Cleveland, Ohio 44135
Reference: B69-10151

Patent status:

No patent action is contemplated by NASA.

Source: Edward A. Maslowski
(LEW-10715)
Category 01